



## 10'x20' Storage Shed Plan



# 10' x 20' Storage Shed Material List

## Site Preparation

- Concrete
- Bricks

## Bottom Frame

- Pressure-Treated Lumber
- Plywood

## Wall Frames

- Pressure-Treated Lumber

## Shed's Roof

- Pressure-Treated Lumber
- Pressure-Treated Board
- Plywood
- Building paper
- Asphalt shingles
- Metal drip edge

## Shed's Door

- Pressure-Treated Lumber
- Wood siding boards
- Plywood

## Fasteners & Hardware

- Door hinges
- Door pulls
- Surface bolt
- Window lock
- Wood square louver gable vent
- Galvanized nails
- Wood screws

## Shed's Window

- Pressure-Treated Lumber
- Window beading
- Glass

# Compare our Free vs. Premium plan

This perfectly designed plan will guide you through the entire process of building your very own shed for any backyard or garden.



Check out the benefits you would get with our **premium edition**:

Features	Free plan	Premium edition
Steps count	11	29
Illustrations for Each Step	✓	✓
Print Ready	✓	✓
Step By Step Instructions	✓	✓
Full Materials and Cuttings List	✗	✓
Additional Illustrations	✗	✓
Additional Blueprints	✗	✓
Tools List	✗	✓
Fastening Elements List	✗	✓
Technical Support	✗	✓


**BUY NOW**

## STEP 1

### Ground Works

**1.1** Clear the area where you want to build the shed and layout for the foundation. Use the below illustration as a guide.

**1.2** For the foundation, dig the trenches at least 1' wide and 1' deep.

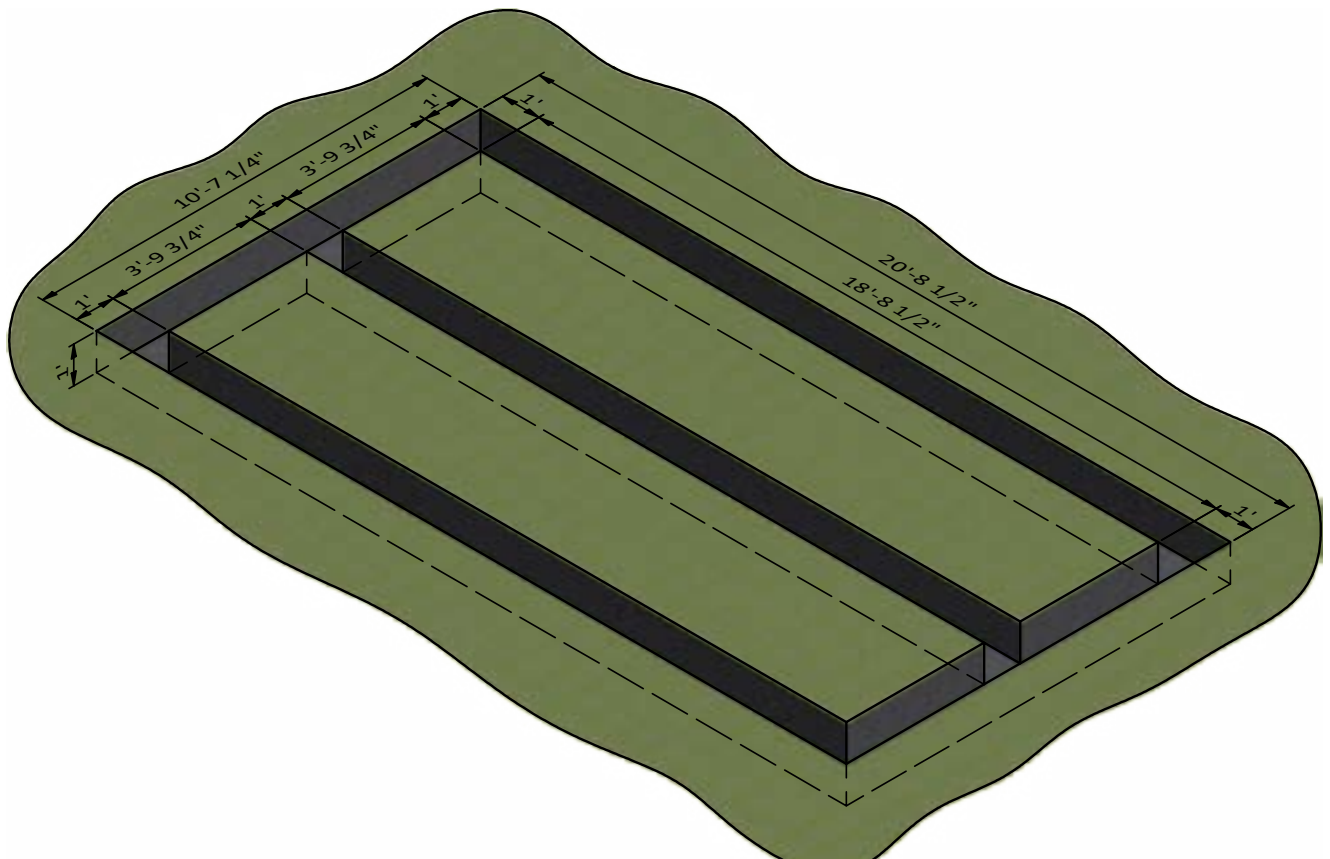


## STEP 2

### Framing the Floor

**2.1** Assemble the frame using 1 1/2" x 7 1/4" pressure-treated lumber. You will need fourteen boards cut to 9'-6 1/4" that will be the joist.

**2.2** Secure the beams with 8x3" wood screws.

**2.3** Using a speed square or carpenter's square, check the corners to make sure they are 90°.

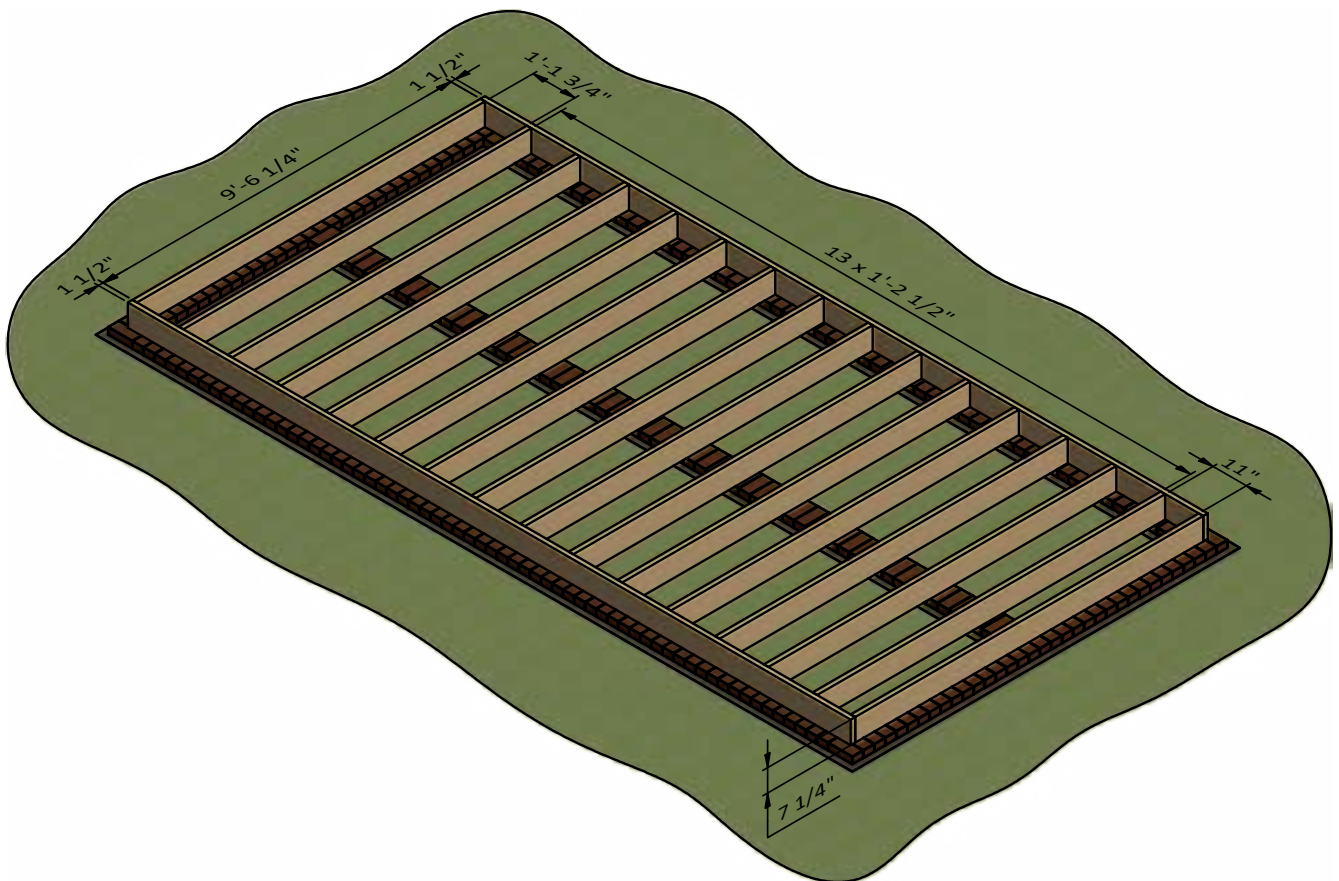


### STEP 3

## Assemble Front Wall Frame

**3.1** Using 1 1/2" x 3 1/2", 1 1/2" x 7 1/4" and 3 1/2" x 3 1/2" pressure-treated lumber, construct front wall frame using the drawing below as a reference. You will need fourteen boards cut to 6'-11", two boards cut to 5'-10 1/2" that will be studs, two boards cut to 7'-2 3/4" that will be the bottom plates, one board cut to 19'-9 1/4" that will be the top plate, two boards cut to 5'-7" that will be the door header and five boards cut to 5 1/4" that will be cripple studs.

**3.2** Connect the beams with 2x3" and 2x5" wood screws.

**3.3** Using a speed square or carpenter's square, check the corners to make sure they are 90°.

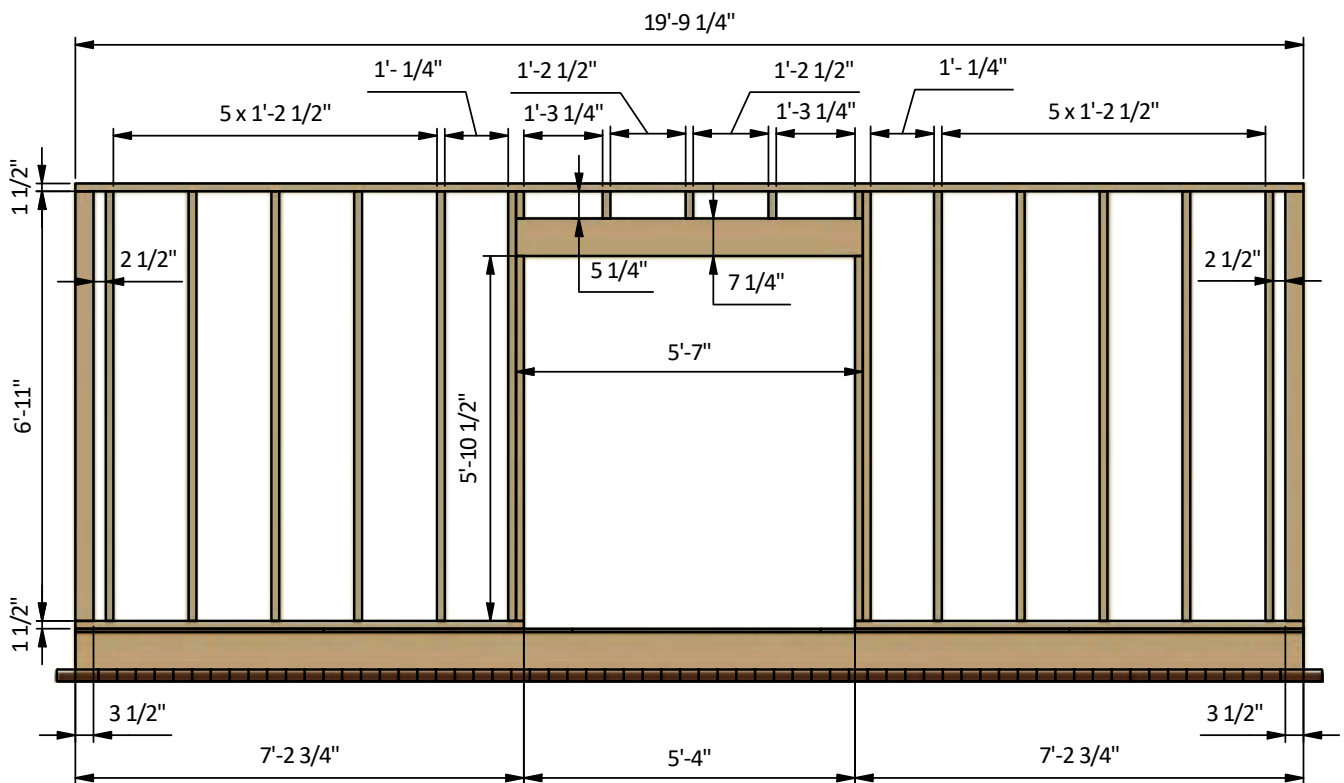




## STEP 4

### Assemble Back Wall Frame

**4.1** Using 1 1/2" x 3 1/2" and 3 1/2" x 3 1/2" pressure-treated lumber, construct back wall frame using the drawing below as a reference. You will need sixteen boards cut to 8'-3" that will be the studs and two boards cut to 19'-9 1/4" that will be the top and bottom plates.

**4.2** Connect the beams with 2x3" wood screws.

**4.3** Using a speed square or carpenter's square, check the corners to make sure they are 90°.

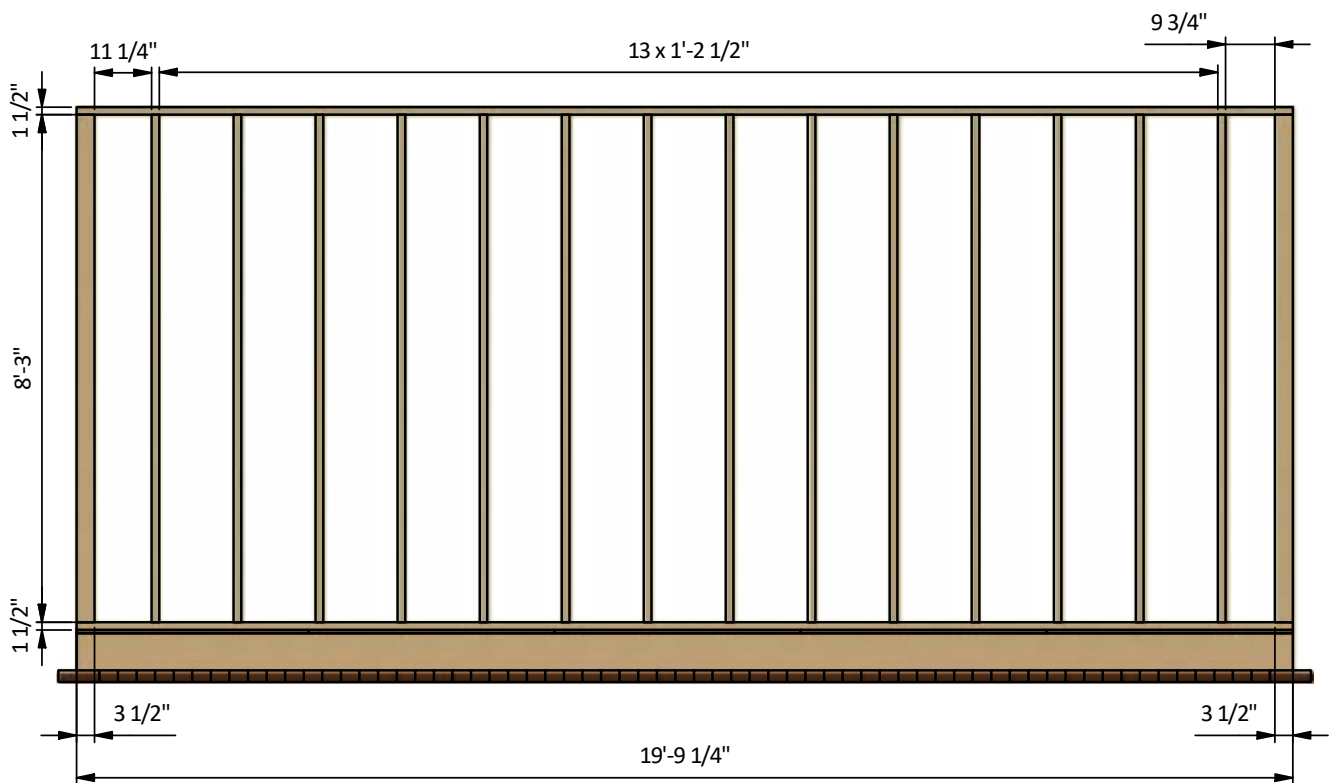


## STEP 5

### Assemble Side Wall Frames

**5.1** Using 1 1/2" x 3 1/2" pressure-treated lumber, construct side wall frames using the drawing below as a reference. For each side wall you will need eight boards cut to 6'-11" and two boards cut to 9'-2 1/4" that will be the top and bottom plates.

**5.2** Connect the beams with 2x3" wood screws.

**5.3** Using a speed square or carpenter's square, check the corners to make sure they are 90°.

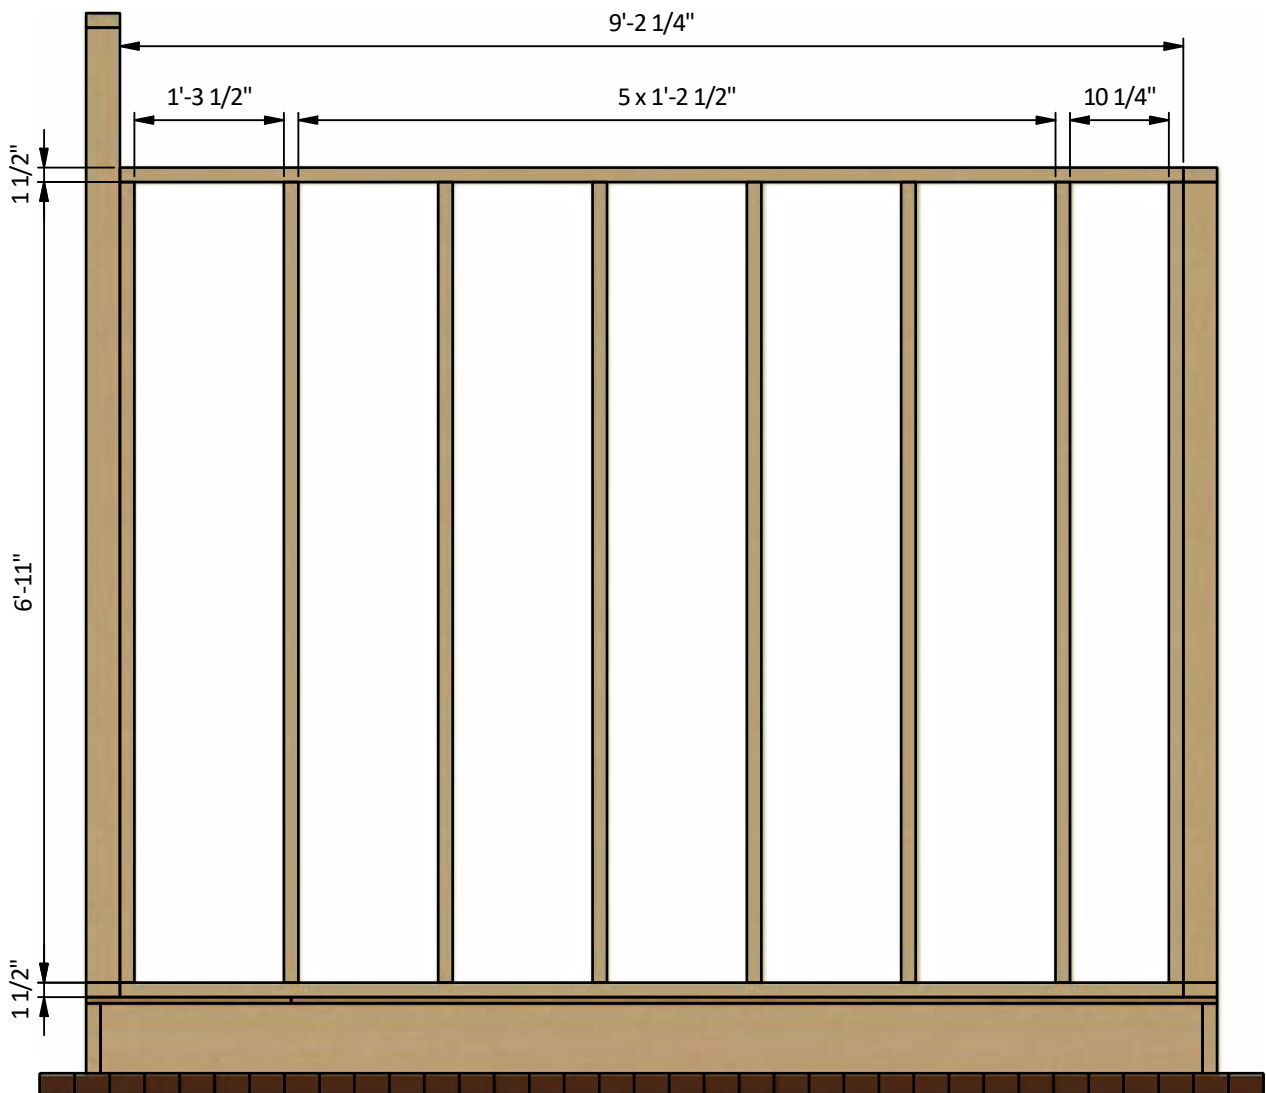





## STEP 6

### Assemble the Roof Frame

**6.1** Using 1 1/2" x 5 1/2" pressure-treated lumber, cut sixteen rafters 11'-1 1/4" long according to the dimensions in drawing below. Cut the recesses in each beam for splicing connection with wall frames.

**6.2** Connect the beams with a top frame with the help of 5" wood screws.

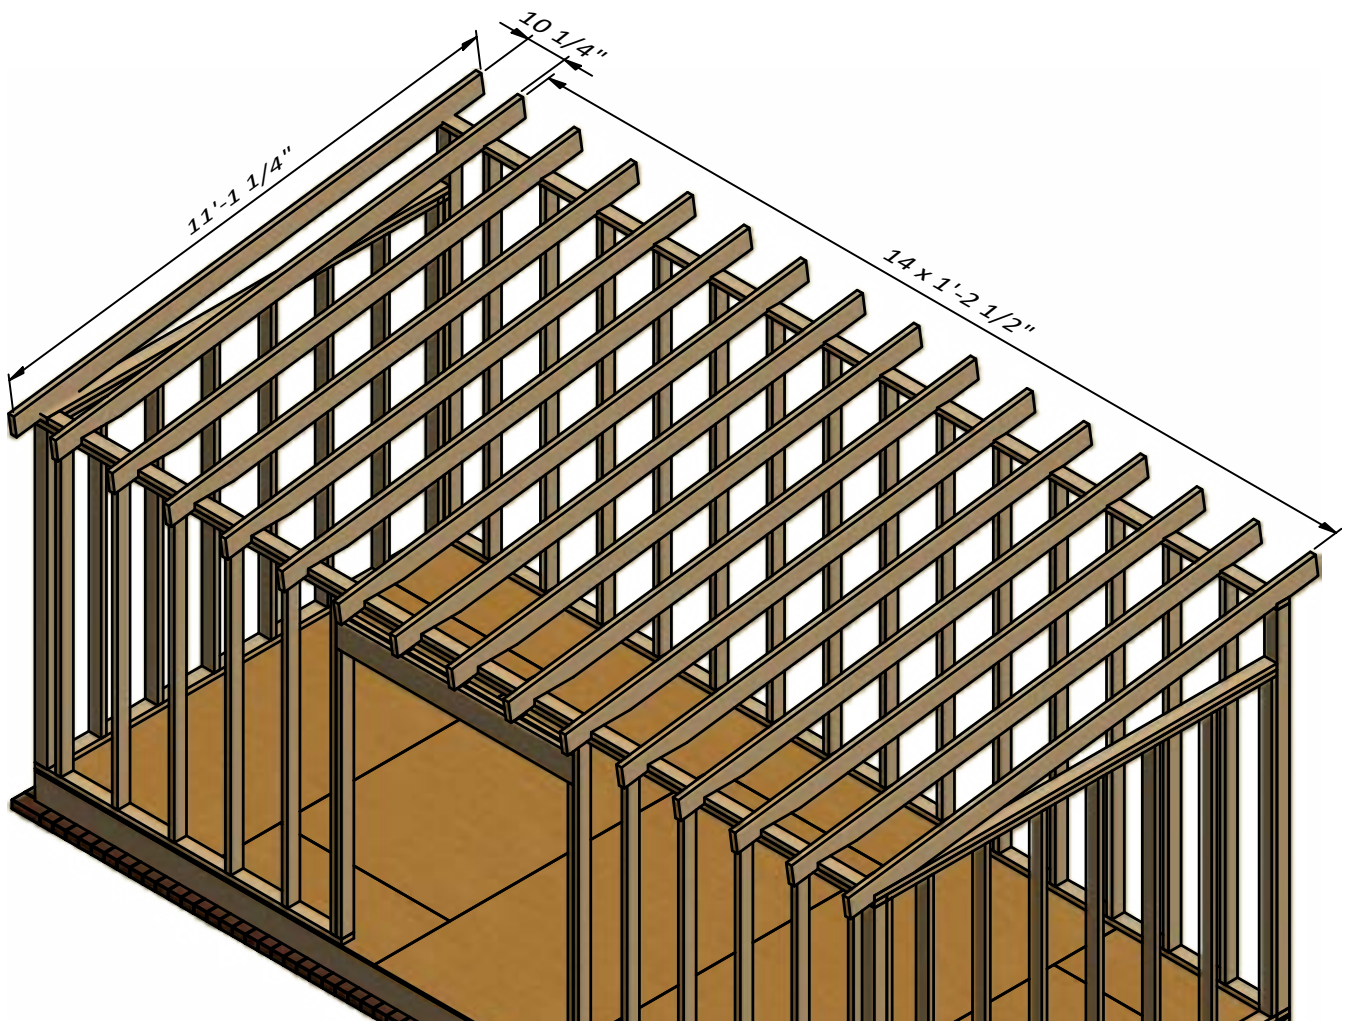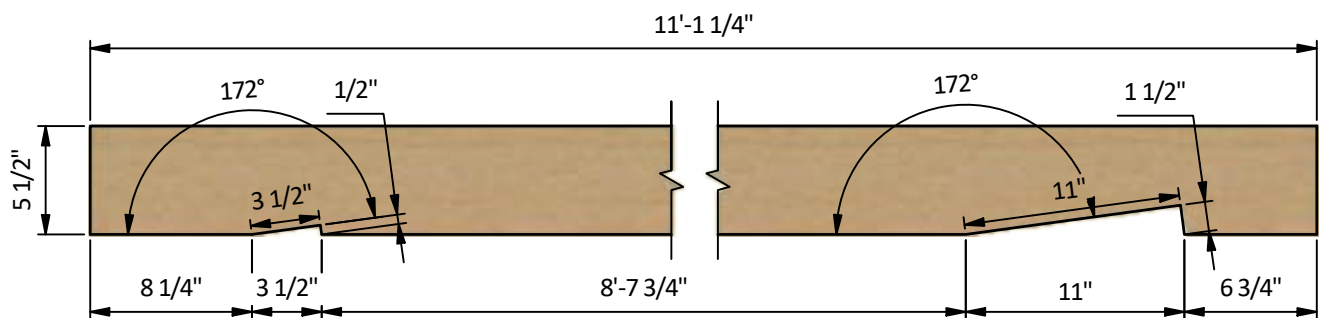

## STEP 7

# Assemble and Install Shed Doors

**7.1** Build the door frames for the shed using 1 1/2" x 3 1/2" pressure-treated lumber and secure with 5" wood screws. You will need two boards cut to 5'-4 3/4" that will be the vertical girts, two boards cut to 2'-7 3/4" that will be the horizontal girts, two boards cut to 3'-3 1/4" that will be cross braces and one board cut to 2'-3/4" that will be middle girt.


**7.2** Prepare the 5/8" plywood sheet with dimensions 5'-11 3/4" x 2'-7 3/4" for the doors according to the drawing.

**7.3** Use 3/4" x 2 1/2" pressure-treated lumber for the door trim and fasten with 2" wood screws. You will need two boards cut to 5'-11 3/4" and two boards cut to 2'-2 3/4".


**7.4** Using 1/4" x 3/4" pressure-treated lumber, cut and install a starter course 2'-2 3/4" long.

**7.5** For the exterior siding on the door, use 1/2" x 6" wood siding boards and the illustration below as a reference. Assemble siding shields with 2" galvanized nails.


**7.6** Install three 4" door hinges using 6x1" wood screws. Finish the doors installation by attaching 4" surface bolts and 6" door pulls (see nodes E, F, G).

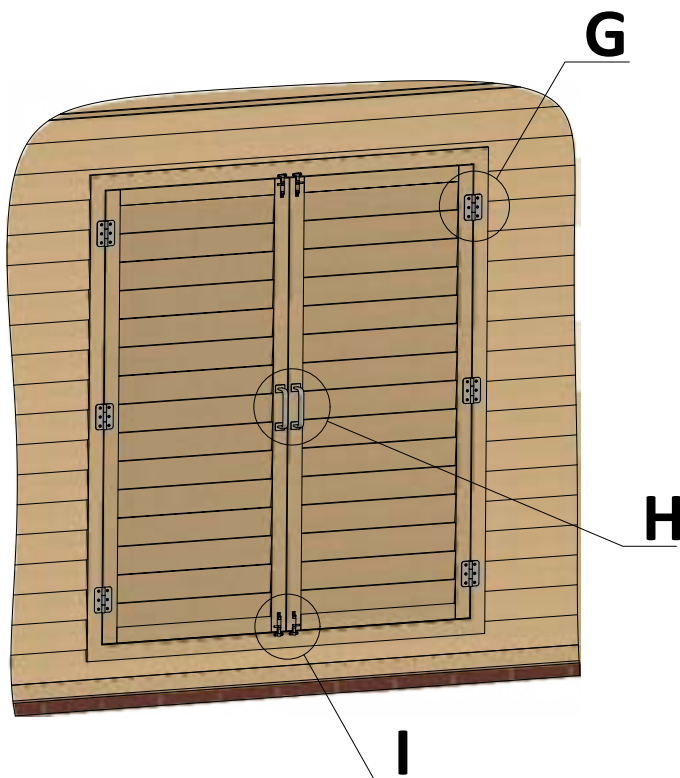


**G** (1 : 10)

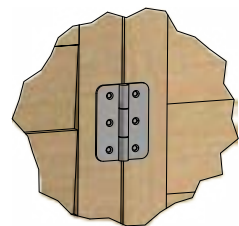

**H** (1 : 10)

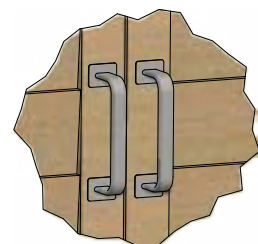

**I** (1 : 10)

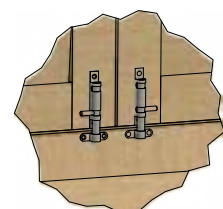


## STEP 8

### Roof Sheathing Installation

**8.1** You will need 239 Sq Ft of building paper and asphalt shingle roofing.

**8.2** Cover the plywood and drip edge with building paper. Try to install sheets with 1" overlapping. Use 2" nails to secure the sheets.

**8.3** Install asphalt shingle roofing using an industrial stapler.

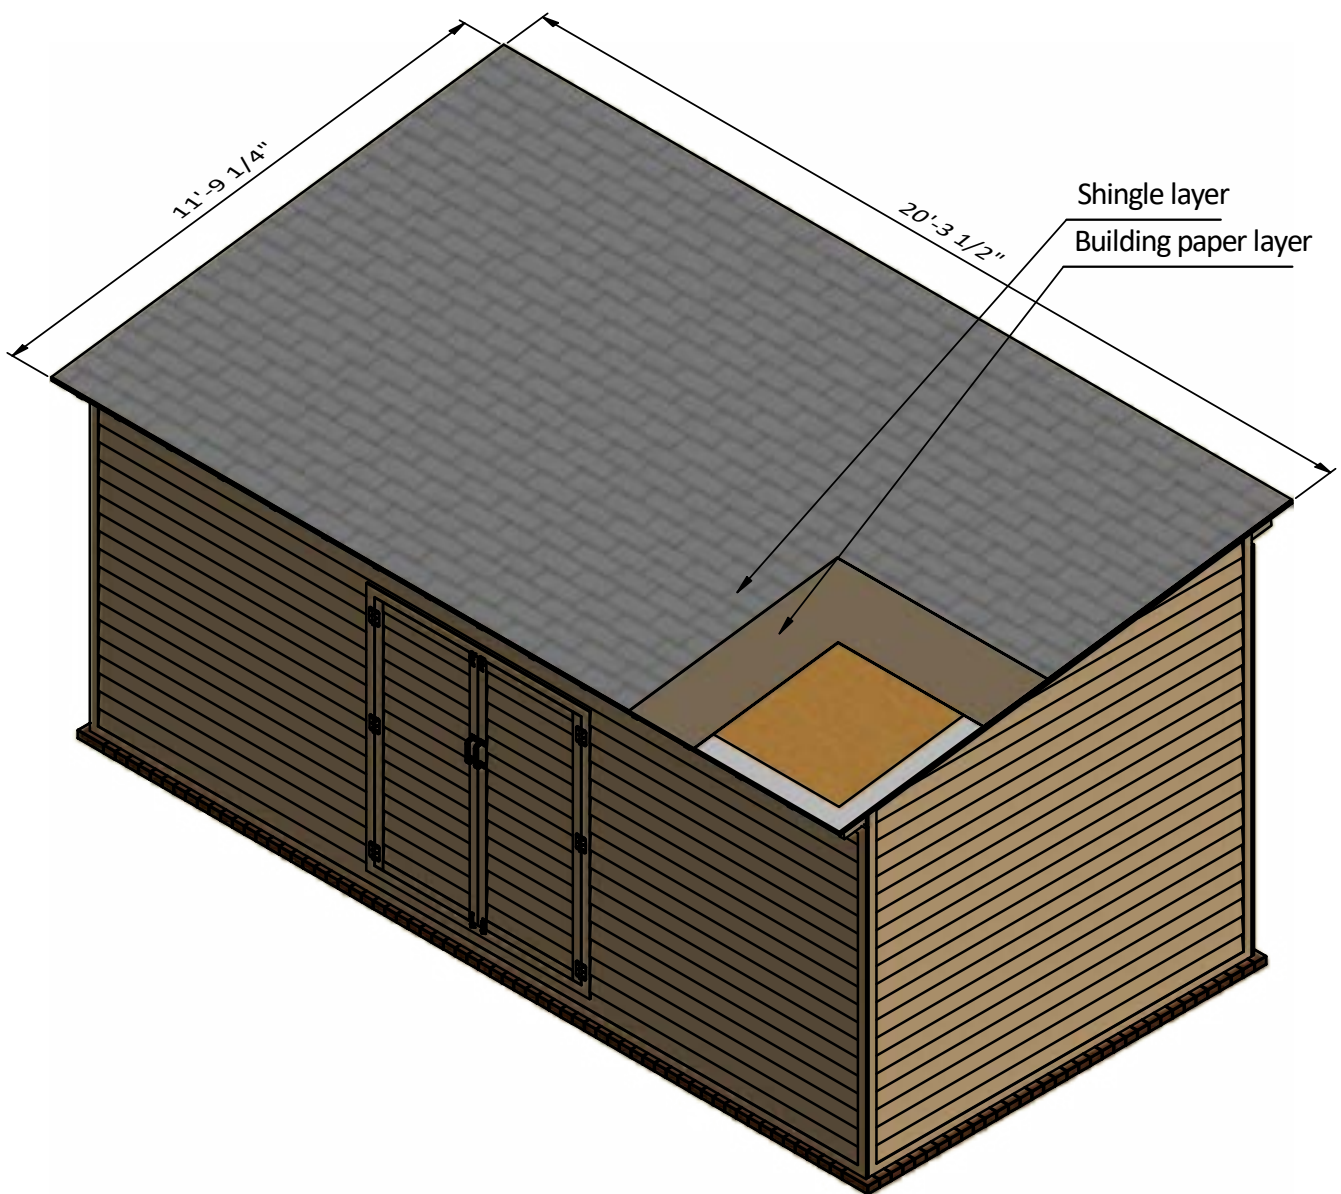


## STEP 9

### Assemble and Install Door Ramp

**9.1** Using  $\frac{3}{4}$ " x  $3\frac{1}{2}$ ",  $\frac{3}{4}$ " x 5",  $1\frac{1}{2}$ " x  $3\frac{1}{2}$ " and  $1\frac{1}{2}$ " x  $7\frac{1}{4}$ " pressure-treated lumber, construct door ramp using the drawing below as a reference. You will need five boards cut to  $2'-9\frac{1}{2}$ " that will be support girts, four boards cut to  $1'-2\frac{1}{2}$ " that will be joists (cut the top edge to fit the angle of support girts, one board cut to  $5'-5\frac{1}{2}$ " that will be rim joist and ten boards cut to  $5'-5\frac{1}{2}$ " that will be top sheathing.

**9.2** Assemble siding shields with 2" and 3" galvanized nails.

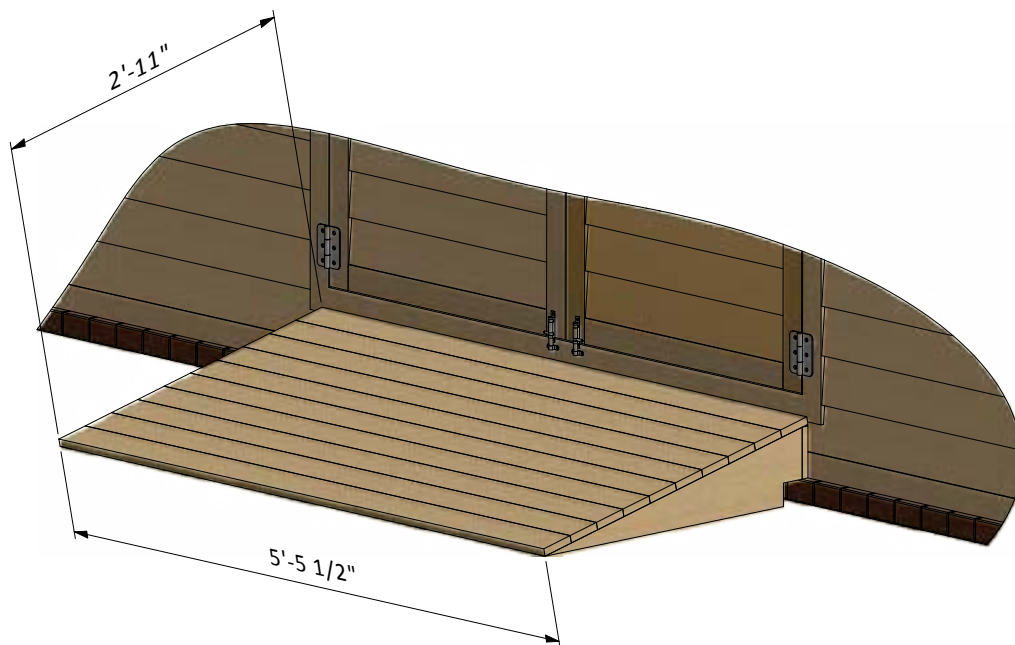


## STEP 10

### Assemble and Install Roof Drainage System

**10.1** Assemble roof drainage system on the front fascia board. You will need 5" half round gutter 18'-9" long, two end pieces with the outlet, six 45° elbows, two 3" pipe 6' long, two joint connectors and two end caps.

**10.2** Fasten the round gutter to the fascia with the seven round hangers.

**10.3** Fasten the vertical pipe section with the two wall fasteners for each side.

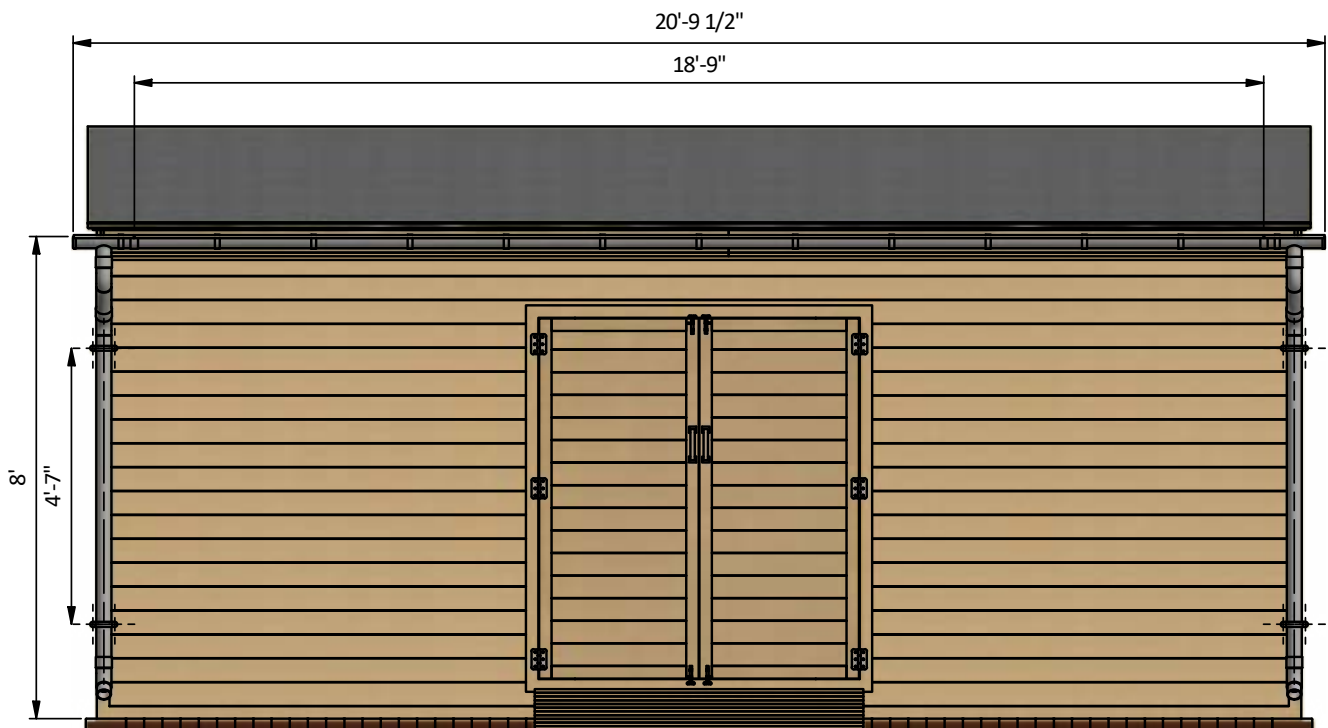



## STEP 11

# Thank You

Now that your shed is all done, you are ready to decorate it any way you want using your favorite paint, stain, or preservative.



# Compare our Free vs. Premium plan

This perfectly designed plan will guide you through the entire process of building your very own shed for any backyard or garden.



Check out the benefits you would get with our **premium edition**:

Features	Free plan	Premium edition
Steps count	11	29
Illustrations for Each Step	✓	✓
Print Ready	✓	✓
Step By Step Instructions	✓	✓
Full Materials and Cuttings List	✗	✓
Additional Illustrations	✗	✓
Additional Blueprints	✗	✓
Tools List	✗	✓
Fastening Elements List	✗	✓
Technical Support	✗	✓

**BUY NOW**





For more great **HOW-TO** plans please visit: <https://shedplans.org>

## Copyright

The text and illustrations that appear here are the exclusive property of shedplans.org and are protected by federal copyright laws. The duplication, sale or distribution of any portion of these plans without prior written consent from the original designer will be subject to the appropriate penalties for copyright infringement. Sharing this plan on the web is only permitted with an indicated original source: <https://shedplans.org>